

**Culinair**  
BY DPI

**USER'S GUIDE**  
V: 523-01



## **AG632**

### **12" Round Electric Skillet**

---

For the most up-to-date version of this User's Guide, go to [www.culinairbydpi.com](http://www.culinairbydpi.com)

## **IMPORTANT SAFEGUARDS**

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before operating.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse cord, plug or appliance itself in water or other liquids.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazards.
7. Only the appropriate connector must be used.
8. The connector must be removed before the appliance is cleaned and that the appliance inlet must be dried before the appliance is used again.
9. The appliance is not intended to be operated by means of an external timer or separate remote-control system.
10. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
11. Do not use outdoors.
12. Do not let cord hang over edge of table or counter or touch hot surfaces.
13. Do not place on or near a hot gas or electric burner, or in a heated oven.
14. Always attach plug to appliance first, then plug cord into wall outlet. To disconnect, turn any control to OFF position, then remove plug from wall outlet.
15. Oversized foods or metal utensils must not be inserted in the appliance as they may cause a fire or risk of electrical shock.
16. A fire may occur if the appliance is covered or touching flammable material including curtains, draperies, walls and the like when in operation.
17. Do not place any of the following materials in the oven: Paper, cardboard, plastic and the like.

## **SAVE THESE INSTRUCTIONS**

**THIS PRODUCT IS FOR HOUSEHOLD USE ONLY!**

## **Before Using for the First Time**

1. Remove all the packaging materials from the unit.
2. Clean both sides of the grilling surfaces of the unit with a damp cloth to wipe off dust or any unwanted residue.
3. Wash the grilling pan, base, and lid with warm soapy water using a sponge or dishcloth. Rinse thoroughly to remove soapy residue.

Note: This appliance can be completely immersed in water.

## **WARNING:**

Never immerse the power cord, plug or temperature selector into water or other liquids. This may cause electrical shortage and bodily harm.

Do not use abrasives, scouring pads or steel wool to clean the surface! It may damage the coating.

## **Operating Instructions**

### **Assemble Knob on Lid:**


1. Position the knob over the hole of the lid.
2. Push the screw through the hole on the bottom side of the lid.
3. Screw tightly into the knob.
4. Periodically tighten screw if needed.

### **Insert Grilling Pan:**

1. Place grilling pan onto the base assuring the power receptacle fits into the base opening.
2. Push down on the grilling pan, locking it securely to the base. You should hear a snap as it locks.

### Connecting the Temperature Selector:

1. Make sure the temperature selector is set to the OFF position.
2. Always plug the power cord into the unit first, THEN plug cord into the wall outlet.

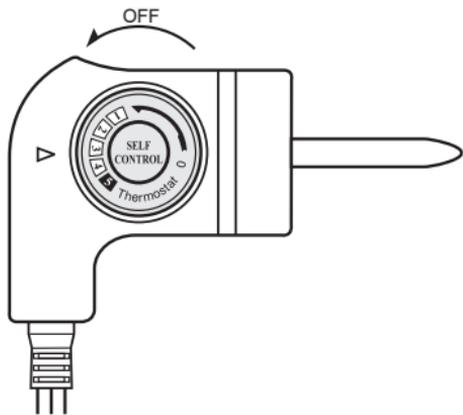

### Cooking:

1. Turn the knob to the desired setting. The red indicator light will illuminate.
2. The light will go off when the cooking pan has reached the selected temperature.
3. When finished, turn the knob to the off position and unplug the power cord.

**NOTE:** During operation, the light will turn on and off indicating the proper temperature is being maintained.

Metal utensils may scratch the non-stick surface. Wooden heatproof plastic, and nylon utensils are recommended.

## **Cleaning Instructions**

1. Disconnect the plug from wall outlet and remove the power cord from the appliance.
2. Allow the unit to cool down completely.
3. Take the oil tray out to cleaning.
4. Pull the cooking pan away from the plastic base.
5. Wash the cooking pan, the base, and the lid with warm soapy water by using a soft sponge or washcloth.
6. Rinse thoroughly to remove soapy residue.

### **WARNING:**

Never immerse the power cord, plug or temperature selector into water or other liquids. This may cause electrical shortage and bodily harm.

Do not use abrasives. Scouring pads or steel wool to clean the surface! It may damage the coating.

### **Short Cord Purpose**

1. A short power-supply cord is provided to reduce risks of injuring yourself from becoming entangled in or tripping over a longer cord.
2. Longer extension cords are available and may be used if you exercise caution during use.
3. If a long detachable power-supply cord or extension cord is used:
  - The marked electrical rating of the cord or extension cord should be at least as great as the electrical rating of the appliance;
  - The longer cord should be arranged so that it does not drape over the counter top or table top where it can be pulled on by children or tripped over unintentionally.

## Pump Disposal



■ Meaning of crossed-out wheeled dust bin:

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities.

Contact your local government for information regarding the collection systems available.

If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposals at least free of charge.

Product Spec: 120V~60Hz, 1300W

# HOUSEHOLD USE ONLY



## Company Information

### International Support

To download this User's Guide in English, Spanish, or French, visit the support section at **[www.culinairebydpi.com](http://www.culinairebydpi.com)**

Para transferir esta guía de usuario en inglés, español, o francés, visite la sección de la ayuda en **[www.culinairebydpi.com](http://www.culinairebydpi.com)**

Pour télécharger ce guide de l'utilisateur en anglais, espagnol, ou français, visitez la section de soutien chez **[www.culinairebydpi.com](http://www.culinairebydpi.com)**

---

For Warranty Information and the most up-to-date version of this User's Guide, go to **[www.culinairebydpi.com](http://www.culinairebydpi.com)**

Customer Service: **1-888-999-4215**

Email Support: **[prodinfo@dpiinc.com](mailto:prodinfo@dpiinc.com)**, Email Parts: **[partsinfo@dpiinc.com](mailto:partsinfo@dpiinc.com)**

Copyright © 2012 Digital Products International (DPI, Inc.) All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice.